



# sewer assessment that unleashes your insight

A complete sewer assessment is essential to prioritizing CCTV and maintenance activities, planning cleaning and rehab work, and meeting regulatory obligations.

**Quickview airHD** makes it easier, faster and more affordable to assess sewer condition, offering productivity features like:

- HD video
- wireless operation
- touchscreen controls
- motorized tilt
- hands-free stability
- remote centering



**Quad Haloptic.** Our patented Haloptic technology gives you more illumination farther into the pipe with optimum alignment at every distance. The new Quad Haloptic configuration uses four offset reflector/lamp pairs to fully encircle the camera with powerful light.

## HALOPTIC

**Smart Center.** To adjust camera height in-manhole, push against the standoff's gas spring to the desired height; a ratchet then holds your position.

**Wi-Fi.** Wireless control and video eliminates cables and allows live video sharing on multiple devices.

**Connection.** Connect to any Quickview airHD in range, either in control or view-only mode. Download app updates to access new features.

**Status Bar.** Monitor illumination, zoom and tilt, as well as Wi-Fi signal and battery (for both tablet and camera).

**Capture.** Record video and capture still images to the media library.


HD Zoom

Tilt

Illumination

camera

controls

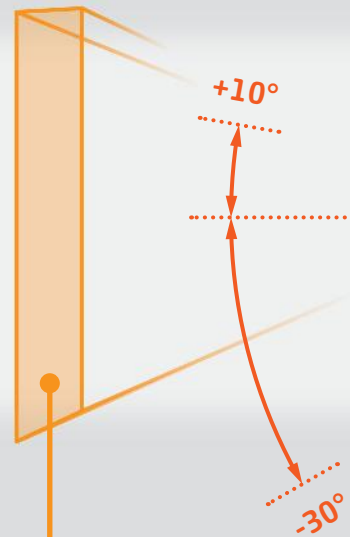

©2016 EnviroSight, LLC. All rights reserved. Specifications subject to change without notice. The Quickview, EnviroSight and Haloptic names and logos are trademarks of EnviroSight. Patents 6,538,732 and 7,009,698; others pending.

**Text Overlay.** Configure on-screen display of text, including variables like zoom, tilt and GPS coordinates. Modify text color and position.

**Media Library.** Browse media thumbnails, then review, annotate and share footage.

Opticon Benelux Naarden BV  
Kobaltstraat 5b  
1411 AM Naarden, Nederland  
T: +31 (0) 35 69 53 991  
[info@opticonbnl.com](mailto:info@opticonbnl.com)  
[www.opticonbnl.com](http://www.opticonbnl.com)